



WARNING

DO NOT USE THIS BENCH IF ANY DAMAGE HAS OCCURRED

DO NOT USE ANY SAW OR APPLY ANY LOAD TO THE BENCH WHICH MAY CAUSE INSTABILITY

AN ADJUSTABLE STABILIZING LEG CAN BE PURCHASED FOR WIDER LOADS OR BIGGER SAW TYPES

DROP-SAW BENCH - INSTRUCTIONS

- 1.** Fold out both legs of the Saw Bench into the fully open position.
- 2.** Saw Bench must be positioned on a flat level surface.
- 3.** Fit Platform.
- 4.** Place the Drop-Saw on top of the aluminium Platform.
- 5.** Adjust the height of the Platform by turning the four Nylock nuts provided so as the saw table is level with the channel top.
- 6.** Align the fence of the saw with the outer edge of the 150mm wide saw bench channel top by using a straight edge.
- 7.** Drill at least 2 x 10mm holes through the base of the Drop-Saw and through the aluminium Platform.
- 8.** To bolt the Drop-Saw down, use at least 2 x 10mm hex bolts with Nylock nuts and tighten.
- 9.** To secure the Platform to the Bench use one wing nut on each of the four height adjusting rods.
- 10.** To fit extension, lift to 45°.

**TOMMY TUCKER
TRESTLES**

AND PLANK FACTORY

8-10 Kenway Dr. Underwood, Q. 4119

(07) 3290 2705

Fax: (07) 3290 0155